




2024 Bullet Proof Designs Exhaust flange Instructions

- *Tools needed:*
- *Spring puller*
- *10 mm socket*
- *8 mm socket*
- *8 mm wrench*

1. Install and snug M6x1.0x12 bolt up before putting the flange on the bike



2. Install the spring retaining plate behind the guard. Install the M6x1.0x40 . Using an 8 mm socket, tighten the bolts back into place. Make sure they are tightened securely, but don't over-tighten them.

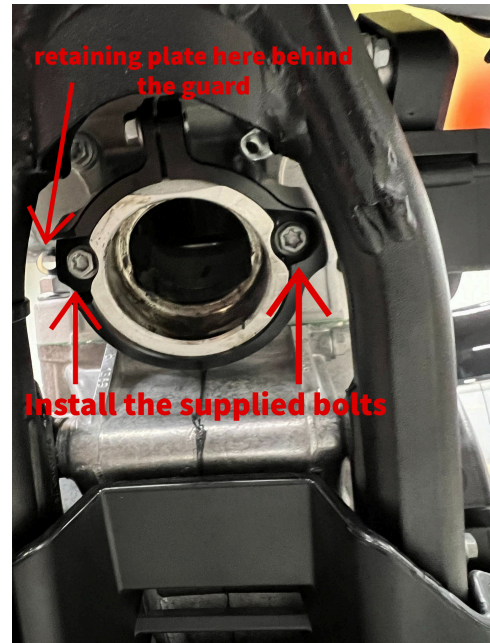

3. Using an 8 mm wrench finish tighten the M6x1.0x12. Make sure they are tightened securely, but don't overtighten them. Double-check to ensure that the exhaust flange guard is securely fastened in place and is not loose.

